

Avenue du Forum 19.
1020 BRUXELLES.
Site: www.promax.group
E-mail: promax@promax.group
Phone: +32(0)495494955



TECHNICAL DATASHEET

ProMax Pro Cleaner

Foam Cleaner is designed specially for cleaning foam gun.

Fields of applications

Foam Cleaner is used for removing uncured foam from clothes, window frames, foam gun etc.

Instruction for use

When using cleaner, press the trigger several times in order to clean the sealant and the nozzle. Foam Cleaner has a spray valve for removing polyurethane foam from gun adapter. Propellant gas does not damage ozone layer. Handle propellant with special care as it contains inflammable gas. In order to clean foam gun connect Foam Cleaner to the gun and clean thoroughly. In order to remove foam from clothes and other objects use the pulveriser nozzle on the can. Follow safety regulations when using Foam Cleaner.

Product properties

Solvent: acetone
Propellant: dimethyl ether

Colour

Colourless

Packages

500 and 340 ml aerosol cans

Cleaning

Collect using absorbent material.

Storage

Can must be stored and transported in vertical position. Store in a cool and dry place. Store at temperatures +5 °C ÷ +30 °C.
Storage life 12 months.

Safety instructions

Inflammable. Keep out of reach of children. Use in rooms with good ventilation only and do not smoke. Take precautionary measures against static discharges. Aerosol can must not be stored and used at temperatures over + 50°C. Do not use near fire.
Detailed safety information is available on safety data sheet (SDS).